


Rotary table cylinder——HRQ Series

Compendium of HRQ Series

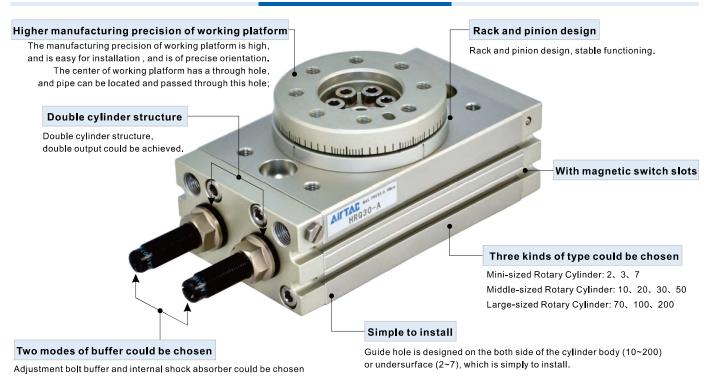

Installation and application





- 1.Dirty substances in the pipe must be eliminated before cylinder is connected with pipeline to prevent the entrance of impurities into the cylinder.
- 2. The medium used by cylinder shall be filtered to 40µm or below.
- Anti-freezing measure shall be adopted under low temperature environment to prevent moisture freezing.
- 4. If the cylinder is dismantled and stored for a long time, pay attention to conduct anti-rust treatment to the surface. Anti-dust caps shall be added in air inlet and outlet ports.


Maximum allowed loading

Loading type					М	odel				
Loading type	HRQ2	HRQ3	HRQ7	HRQ10	HRQ20	HRQ30	HRQ50	HRQ70	HRQ100	HRQ200
Maximum allowed radial loading (N)	18	30	50	80	150	200	300	330	390	540
Maximum allowed axial loading (N)	35	50	70	80	150	200	300	300	500	740
Maximum allowed bending moment (Nm)	0.8	1.1	1.5	2.5	4.0	5.5	10.0	12.0	18.0	25.0

 Actual torque output

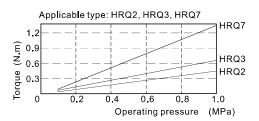

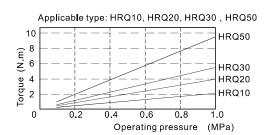









Symbol



Product feature

- 1. Rack and pinion design, stable functioning.
- 2. Double cylinder structure, double output could be achieved.
- 3. The manufacturing precision of working platform is high, and is easy for installation, and is of precise orientation.
- 4. The center of working platform has a through hole, and pipe can be located and passed through this hole;
- 5. Guide hole is designed on the both side of the cylinder body (10~200) or undersurface (2~7), which is simply to install.
- 6. Two modes of buffer could be chosen, adjustment bolt buffer and internal shock absorber, the maximum buffer energy of internal shock absorber is 3-5 times that of adjustment bolt buffer.

Specification

Specifica	ation	2	3	7	10	20	30	50	70	100	200		
Acting typ	ре		1	Double rac	k and	pinio	n(Dou	ble ac	ting)				
Fluid				Air(to be fil	tered l	by 40 ₁	ım filt	er eler	ment)				
Operating	With adjustment bolt	(37~1	0.7MPa 00psi) ·7bar)	0.2~0.7MPa (29~100psi) (2~7bar)		(22	0.1 ~100p	5~0.71 si)(1		bar)			
pressure	With internal shock absorber		-			(22	0.19 100p~	5~0.7I si)(1		bar)			
Proof pre	ssure			1.21	/IPa(1	75psi	(12.0	bar)					
Temperat	ture °C		-20~70										
Angle adj	ustment range	0~190° 0~190°											
Repeatable	With adjustment bolt					0.2°							
precision	With internal shock absorber		-					0.05°					
Theoretic (Nm)(0.5		0.2	0.33	0.63	1.1	2.2	2.8	5.0	7.5	11.0	22.0		
Cushion	With adjustment bolt		mper										
type		-			Shock absorber								
Dortoine	End ports			M50 0		1/8" [Note1]							
Port size	M5×0.8					M5×0.8							
Weight	120	175	270	535	940	1260	2060	2890	4100	7650			

[Note1] PT thread, G thread and NPT thread are available. Add) Refer to P362 for detail of sensor switch.


Maximum allowed movement energy and rotation times

Model	Maximal al	lowed energy (J)	Rotation	times (s/90°)
Wodel	With adjustment bolt	With internal shock absorber	With adjustment bolt	With internal shock absorber
HRQ2	0.0015	-	0.2~0.7	-
HRQ3	0.002	-	0.2~0.7	-
HRQ7	0.006	-	0.2~1.0	-
HRQ10	0.01	0.04	0.2~1.0	0.2~0.7
HRQ20	0.025	0.12	0.2~1.0	0.2~0.7
HRQ30	0.05	0.12	0.2~1.0	0.2~0.7
HRQ50	0.08	0.30	0.2~1.0	0.2~0.7
HRQ70	0.24	1.1	0.2~1.5	0.2~1.0
HRQ100	0.32	1.6	0.2~2.0	0.2~1.0
HRQ200	0.56	2.9	0.2~2.5	0.2~1.0

[Note]

- 1: The movement energy should not exceed the allowed maximum energy, or the inner accessories of product would be damaged;
- 2: When the rotation times of with shock absorber is larger than the allowed tolerance, the bigger effect will be lost.

Ordering code

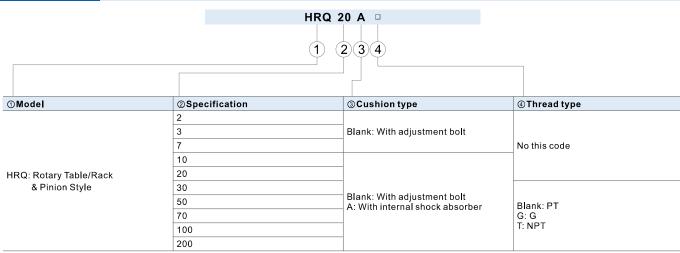


[Note] HRQ series are all atteched with magnet.






Inner structure and material of major parts

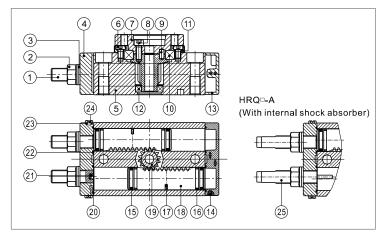

NO.	Item	Material
1	Adjustment bolt	Carbon steel
2	Hexagon nut	Carbon steel
3	Seal washer	Carbon steel & Rubber
4	Front cover	Aluminum alloy
5	Body	Aluminum alloy
6	Hexagon socket head cap bolt	Carbon steel
7	Table	Aluminum alloy
8	Hexagon socket head cap bolt	Carbon steel
9	Guide pin/flat key	Carbon steel
10	Deep-groove bearing	Subassembly
11	Bearing retainer	Aluminum alloy
12	Deep-groove bearing/Needle bearing	Subassembly
13	Back cover	Aluminum alloy
14	Steel ball	Stainless steel
15	Piston seal	NBR
16	Wear ring	Wear resistant material
17	Magnet	Rare earths
18	Rack	Stainless steel/Carbon steel
19	Pinion	Chrome molybdenum steel
20	O-ring	NBR
21	Bumper	NBR
22	O-ring	NBR
23	O-ring	NBR
24	Hexagon screw	Stain l ess steel
25	Shock absorber	Subassembly

Dimensions


HRQ2/3/7

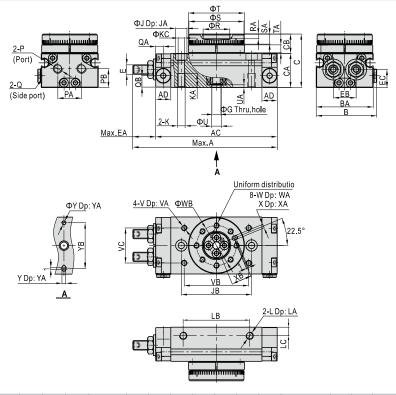

Type\Item	Α	AC	AD	В	BA	A C	CA	СВ	Е	EA	EB	EC	G	J	JA	JB		K	KA	KC	L	LA	LB	LC	Р		PA
2	76	64	8	32	30	28	18	10	M5×0	.8 12	12	9.5	4	6	3.5	37	M	4×0.7	7.5	3.5	M4×0	.7 4	35	4.5	M5×	8.0	12.5
3	82	70	8	36.5	34.	5 30.5	20.5	10	M5×0	.8 12	15.5	10.5	5	7.5	4.5	43	M	5×0.8	8.5	4.5	M4×0	.7 4	40	4.5	M5×	8.0	15.5
7	94.5	79.5	8	43	41	34.5	23	11.5	M6×1	.0 15	18.5	12	6	7.5	4.5	50	M	5×0.8	8.5	4.5	M5×0	.8 5	50	5	M5×	8.0	18.5
Type\Item	РВ	Q	- 1	QA I	QB	R	RA	S	SA	Т	TA	U	UA	\ \	/	VA	VB	VC	W	WA	WB	Х	XA	ΧВ	Υ	YA	YB
2	10	M5×0	3,0	4	6	14(H9)	2.5	29(h9) 5.5	29.5(h9)	4	5(H9)	1.5	M3×	٥.5	3.5	34	18.5	M3×0.5	5.5	21	2(H9)	2	10.5	2(H9)	2	24
3	12	M5×0	0.8	4	7.5	17(H9)	2.5	33(h9	5.5	34(h9)	4	6(H9)	1.5	M3×	٥.5	3.5	38	23	M3×0.5	5.5	25	2(H9)	2	12.5	2(H9)	2	28
7	14	M5×0	8,0	4	9	20(H9)	3	39(h9) 6.5	40(h9)	4.5	7(H9)	1.5	M4×	۷.7	4.5	45	30	M4×0.7	6.5	29	3(H9)	3	14.5	3(H9)	3	32



HRQ10~50

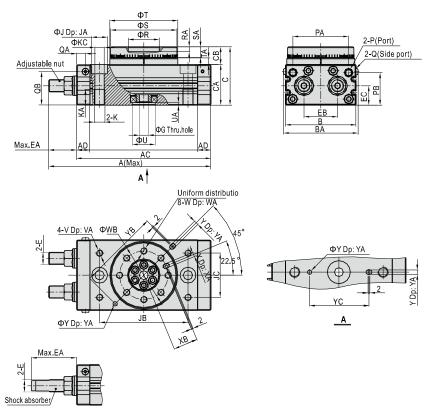


HRQ-A(With internal shock absorber)

				III	≀	itii iiitei	iliai silot	r aus	orber,	,													
Type\Item	A(With	internal	shock	absorber)	A(With	adjustn	nent bolt)	AC	AD	В	ВА	С	CA	СВ		Е	EA(With	internal	shock ab	sorber)	EA(Wi	th adjustn	nent bolt)
10		1:	23			112		92	9.5	50	54	47	34	13	M10	0×1.0		31				20	
20		10	69			145.3		117	11	65	69	54	37	17	M12	2×1.0		52	2			28.3	
30		17	8.5			154.5		127	11.5	70	74	57	40	17	M12	2×1.0		51.	5			27.5	
50		2	12			185.9		152	15	80	84	66	46	20	M14	4×1.5		60)			33.9	
Type\Item	EB	EC	G	J	JA	JB	JC	ı	K	KA	K	С	Р	P	۱ ۱	PB	Q	QA	QB	R	RA	S	SA
10	20.5	14	5	11	6.5	60	27	M8×	1.25	12	6.	5	M5×0.8	34	.5	28	M5×0.8	4.5	29	20(H9)	4.5	45(h9)	8
20	27.5	16	9	14	8.5	76	34	M10	×1.5	15	8.	5	M5×0.8	4	7	30	M5×0.8	6	30	28(H9)	6.5	60(h9)	10
30	29	18.5	9	14	8.5	84	37	M10	×1.5	15	8.	5	1/8"	50)	32	M5×0.8	6.5	34	32(H9)	5	65(h9)	10
50	38	22	10	17.5	12	100	50	M12	×1.75	18	10	.5	1/8"	6	3	38	M5×0.8	10	38	35(H9)	5.5	75(h9)	12
Type\Item	Т	TA		U	UA	V	'	VA		w		WA		В	Х	(XA	ХВ	Υ	Y	Ά	YB	YC
10	46(h9)	4.5	5 1	I5(H9)	3	M5×	0.8	8	N	15×0.8		8	3	2	3(F	1 9)	3.5	16	3(H9) 3	.5	56	40
20	61(h9)	6.5	5 1	17(H9)	2.5	M6×	1.0	8	N	16×1.0		10	4	3	4(H	1 9)	4.5	21.5	4(H9) 4	.5	74	50
30	67(h9)	6.5	5 2	22(H9)	3	M6×	1.0	8	N	16×1.0		10	4	8	4(F	1 9)	5	24	4(H9) 4	.5	80	58
50	77(h9)	7.5	5 2	26(H9)	3	M8×1	1.25	8	М	8×1.2	5	12	5	5	5(F	1 9)	6	27.5	5(H9) 5	.5	92	68

240



HRQ70~200

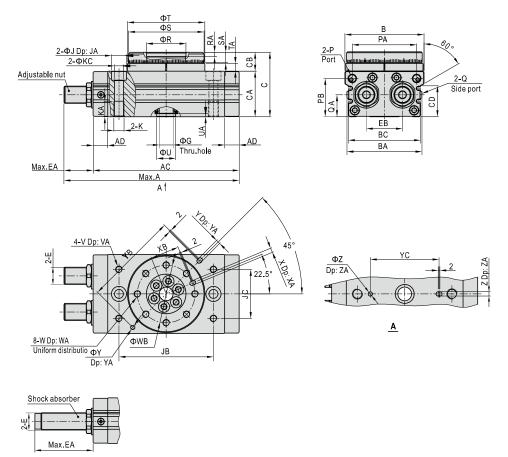

HRQ⁻-A(With internal shock absorber)

Type\Item	A(With	adjust	ment bolt) A(W	ith inter	nalsho	ck abs	orber)	AC	AD	В	ВА	ВС	С	CA	СВ	CD	Е	E	EA(Wit	h adj	ustment	t bolt)
70		206.	8			244			170	17	92	88	84	75	53	22	36	M20×1	1.5		3	8.8	
100		225.	7			263			189	17	102	99	95	86	59	27	42	M20×1	1.5		3	6.7	
200		279.	5			316.5			240	24	120	117	113	106	74	32	57	M27×1	1.5		3	9.5	
Type\Item	EA(Witl	n interna	al shock abs	orber)	EB	G	J	JA	JB	JC	К		KA	KC	Р	PA	РВ	Q	QA	R	RA	S	SA
70		7	74		42	16	17.5	12	110	57	M12×	1.75	18	10.5	1/8"	75	44.5	M5×0.8	25.5	46(H9)	5	88(h9)	12.5
100		- 7	74		50	19	17.5	12	130	66	M12×	1.75	18	10.5	1/8"	85	50.5	M5×0.8	29.5	56(H9)	6	98(h9)	14.5
200		7	6.5		60	24	20	12.5	150	80	M16	<2.0	25	14	1/8"	103	63	M5×0.8	36.5	64(H9)	9	116(h9)	16.5
Type\Item	Т	TA	U	UA	\ \ \	,	VA		w	V	/A	WB	Х	X.	A	ХВ	Υ	YA	YB	Υ.	С	Z	ZA
70	90(h9)	9	22(H9)	3.5	M8×	1 . 25	10	M	3×1 . 25	1:	2.5	67	5(H9) 5.	5	33.5	5(H9)	3.5	110) 8	0	5(H9)	3.5
100	100(h9)	12	24(H9)	3.5	M8×	1.25	10	M	10×1.5	1-	4.5	77	6(H9) 6.	5	38.5	6(H9)	4.5	120	10	00	6(H9)	4.5
200	118(h9)	15	32(H9)	5.5	M12>	1.75	13	M1	2×1.75	5 10	3.5	90	8(H9) 8.	5	45	8(H9)	4.5	140) 11	0	8(H9)	6.5

241

AITTAL

T:Necessary torque required for loading rotation (N.m)

K:Coefficient of allowance, K is defined as 5

I:Moment of inertia (kg.m²)

θ:Rotation Angle (rad)

t:Rotation time (s)

ω:Angular acceleration (rad/s²)

T=K×l×ω

HRQ Series

How to select product

- 1. Determine the following working conditions according to the actual situation:
- 1.1) Rotation angle θ : The actual rotation angle must be within the maximum allowed range of rotation angle of cylinder.
- 1.2) Rotation time t: The rotation time must be within the maximum allowed range of rotation time of cylinder.
- 1.3) Installation position of cylinder: Allow enough installation space, so as to ensure leaving adequate space for rotation of cylinder and workpieces.
- 1.4) Determination of loading mass and loading shape.
- 2. Calculation of necessary torque needed when loading rotation (T(N.m):
 Calculate the necessary moment required for loading rotation according to the formula below, and combine with the torque diagram of actual effect, to choose pneumatic cylinder with suitable torque output.
- 2.1) Calculation method of moment of inertia in different conditions

Diagram	Description	Calculation formula of moment of inertia	Rotation radius	Diagram	Description	Calculation formula of moment of inertia	Rotation radius	
Disk	d:Diameter (m) m:Mass (kg)	I=\frac{md^2}{8}	d ² 8	Rectangle sheet	a:Sheet length (m) b:Length of side(m)	$I = \frac{m(a^2 + b^2)}{12}$	$\frac{a^2+b^2}{12}$	
		Note: no special installat	ion direction		m:Mass(kg)	Note: no special installa	tion direction	
Classified disk	d ₁ :Diameter(m) d ₂ :Diameter(m) m ₁ :d ₁ Mass(kg)	8	$\frac{d_{1}^{2}+d_{2}^{2}}{8}$	Rectangle sheet	a:Sheet length (m) m:Mass (kg)	$I = \frac{ma^2}{12}$	<u>a²</u> 12	
1-1-102	m ₂ :d ₂ Mass(kg)	Note: compare d ₁ with d ₂ if d ₁ is extremely tiny	, disregard d₁			Note: no special installa	ition direction	
Disk	d:Diameter (m)	₁_ md²	<u>d²</u> 16	Rectangle sheet	a:Shoot longth (m)	$I = \frac{ma^2}{3}$	<u>a²</u> 3	
$\left(\begin{array}{c} d \\ \end{array}\right)$	m:Mass (kg)	I=\frac{md^2}{16} Note: no special installat		a	a:Sheet length (m) m:Mass (kg)	Note: 1. horizontal installatio 2. pay attention to the chang time when vertical ins	e of movement	
Sphere	r:Radius(m) m:Mass(kg)	$I = \frac{2mr^2}{5}$	2r ² 5	Rectangle sheet	a:Sheet length (m) b:Distance between the rotation axis and the gravity center of loading(m)	$I = \frac{ma^2}{12} + mb^2$ $\frac{a^2}{12} + mb^2$		
		Note: no special installat	ion direction	'	m:Mass(kg)	Note: the cuboids are sa	ame too.	
Thin-stick a a a a a	a,:Length of stick(m) a ₂ :Length of stick(m) m,:a, Mass(kg) m ₂ :a ₂ Mass(kg)	I=\frac{m_1a_1^2 + m_2a_2^2}{3} Note: 1. horizontal installation 2. pay attention to the change time when vertical inst	of movement	Number of teeth a	a:Tooth number of gear b:Tooth number of loading gear	$I_a = \left(\frac{a}{b}\right)^2 I_b$		
Rectangle sheet	a,:Sheet length (m) az:Sheet length (m) b: Length of side(m) m,:a, Mass(kg)	$I = \frac{m_1(4a_1^2+b^2)+m_2(4a_2^2+b^2)}{12}$ Note: 1. horizontal installation		Concentrated load	a,:Vertical distance between the rotation axis and the concentrated loading(m) a;:Length of arm(m) m::Mass of concentrated	I=m ₁ a ₁ ² + m ₂ a ₂ ² +m ₁ K Note: 1. horizontal installation. 2. compared with m, disregard if m is extremely tin 3. calculate K according to the		
	m ₂ :a ₂ Mass(kg)	norizontal installation pay attention to the change time when vertical inst	of movement		loading(kg) m ₂ :Mass of arm(kg)			

3. Calculation of maximum movement energy $\boldsymbol{E}_{\scriptscriptstyle{max}}(\boldsymbol{J})$:

Calculate the maximum movement energy E_{max} according to the formula below, and make sure that the maximum movement energy is within allowed energy range of the chosen pneumatic cylinder, excessive large movement energy would lead to damage of inner parts, please choose rotation cylinder attached with shock absorber when the movement energy is fairly large.

$$\mathsf{E}_{\scriptscriptstyle{\mathsf{max}}} = \frac{1}{2} \;\; \mathsf{I}\omega^{\scriptscriptstyle{\mathsf{2}}}_{\scriptscriptstyle{\mathsf{max}}} \qquad \qquad \omega_{\scriptscriptstyle{\mathsf{max}}} = \frac{2\theta}{t} \qquad \qquad \omega_{\scriptscriptstyle{\mathsf{max}}} : \; \mathsf{Maximal\,angular\,velocity}(\mathsf{rad/s})$$

4. Calculation of loading rate

Calculate the loading rate according to the formula below, and the loading rate must not be more than 1.

Loading rate =-	W _s Maximal allow axial loading	— + ed	W, Maximal allowed radial loading	+	M Maximal allowed bending moment of working platform	1
W₅ : Actual a	xial loading \	V, : /	Actual radial loading	ľ	M:Actual loaded bending moment of working platform	


5. Determination method


It could be used only when the chosen pneumatic cylinder must meet the requirements of article 2, 3 and 4 simultaneously.



Installation and application

- 1. Rotation Direction and Rotation Angle
- 1.1) Rotation Direction

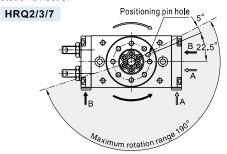


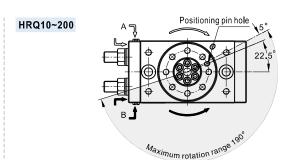


- A) By adjusting the adjustment bolt, the rotation end can be set within the range shown in the up drawing: Maximum ratation is 190°;
- B) The rotary table turns in the clockwise direction when the A port is pressurized, and in the counter-clockwise direction when the B port is pressurized.
- 1.2) Rotation Range Example(90° Rotation)

HRQ2/3/7


Adjustment amount by adjustment bolt B

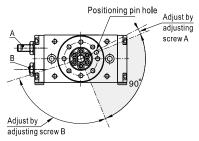

Adjustment amount by adjustment bolt A

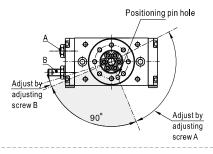


Adjustment amount by adjustment bolt A, B

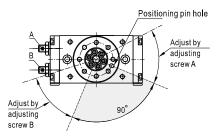


1.3) The rotation angle can also be set on a type with internal absorber.

HRQ10~200


Adjustment amount by adjustment bolt B

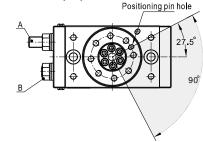

Adjustment amount by adjustment bolt A

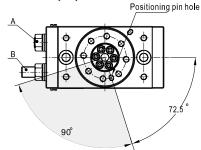

Adjustment amount by adjustment bolt A, B

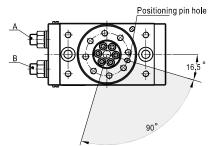

Model	Adjustment angle per rotation of angle(adjustment screw)	Model	Adjustment angle per rotation of angle(adjustment screw or shock absorber)
HRQ2	11.5°	HRQ10	10.2°
HRQ3	10.9°	HRQ20	6.5°
HRQ7	10 . 2°	HRQ30	6.5°
		HRQ50	8,2°
		HRQ70	7.0°
		HRQ100	6.1°
		HRQ200	4.9°



- 2. The range of rotation angle has been adjusted to the maximum in the factory, please do not enlarge the rotation angle any more.
- $\textbf{3.} \ \textbf{The movement energy should not exceed the allowed maximum energy, or the inner parts will be damaged.} \\$
- 4. The rotary parts need no lubrication.
- 5. Series HRQ is equipped with a rubber bumper or shock absorber. Therefore, perform rotation adjustment in the pressurized condition(minimum operation pressure: 0.1 Mpa or more for adjustment bolt and internal shock absorber types, and 0.2 MPa or more for external shock absorber type.)
- 6. Refer to the table below for tightening torques of the shock absorber setting nut.


Shock absorber size	Max. tightening torque(Nm)
M10	3.5
M12	8.0
M14	11.0
M20	24.0
M27	63.0

- 7. Never loosen the bottom screw of the shock absorber. (It is not an adjustment screw.) That may cause oil leakage.
- 8. Shock absorbers are consumable parts.

When a decrease in energy absorption capacity is noticed, it must be replaced.

Rotary table cylinder	Shock absorber
HRQ10	ACA1006-A
HRQ20\HRQ30	ACA1215-A
HRQ50	ACA1416-A
HRQ70\HRQ100	ACA2020-A
HRQ200	ACA2725-A

9. Strictly control run out and parallelism of the dial according to the requirements of the following table.

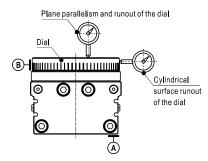

ltems .	Specific requirements	Relative datum
Plane parallelism of the dial	0.1	Α
Plane runout of the dial	0.1	Α
Cylindrical surface runout of the dial	0.1	В